


Prepared By: Florida Shoreline & Foundation Experts, LLC  
6504 Superior Ave.  
Sarasota, FL 34231  
941-927-1410                      CBC 1258622

# TYPICAL GEOTUBE SHORELINE RESTORATION

## Process of a geotube shoreline restoration:

1. Any sharp objects are cleared from the shoreline.
2. Shoreline is measured and geotubes are manufactured, installed, and staked into place
3. Bottom geotube is filled with sand/silt from the lake bottom.
4. Top geotube is filled with sand/silt from the lake bottom.
5. Once filled, the top tube is cut open and the fill is spread and graded along the shoreline. Bottom tube remains whole.
6. Sod is placed on all disturbed areas down to the waterline.

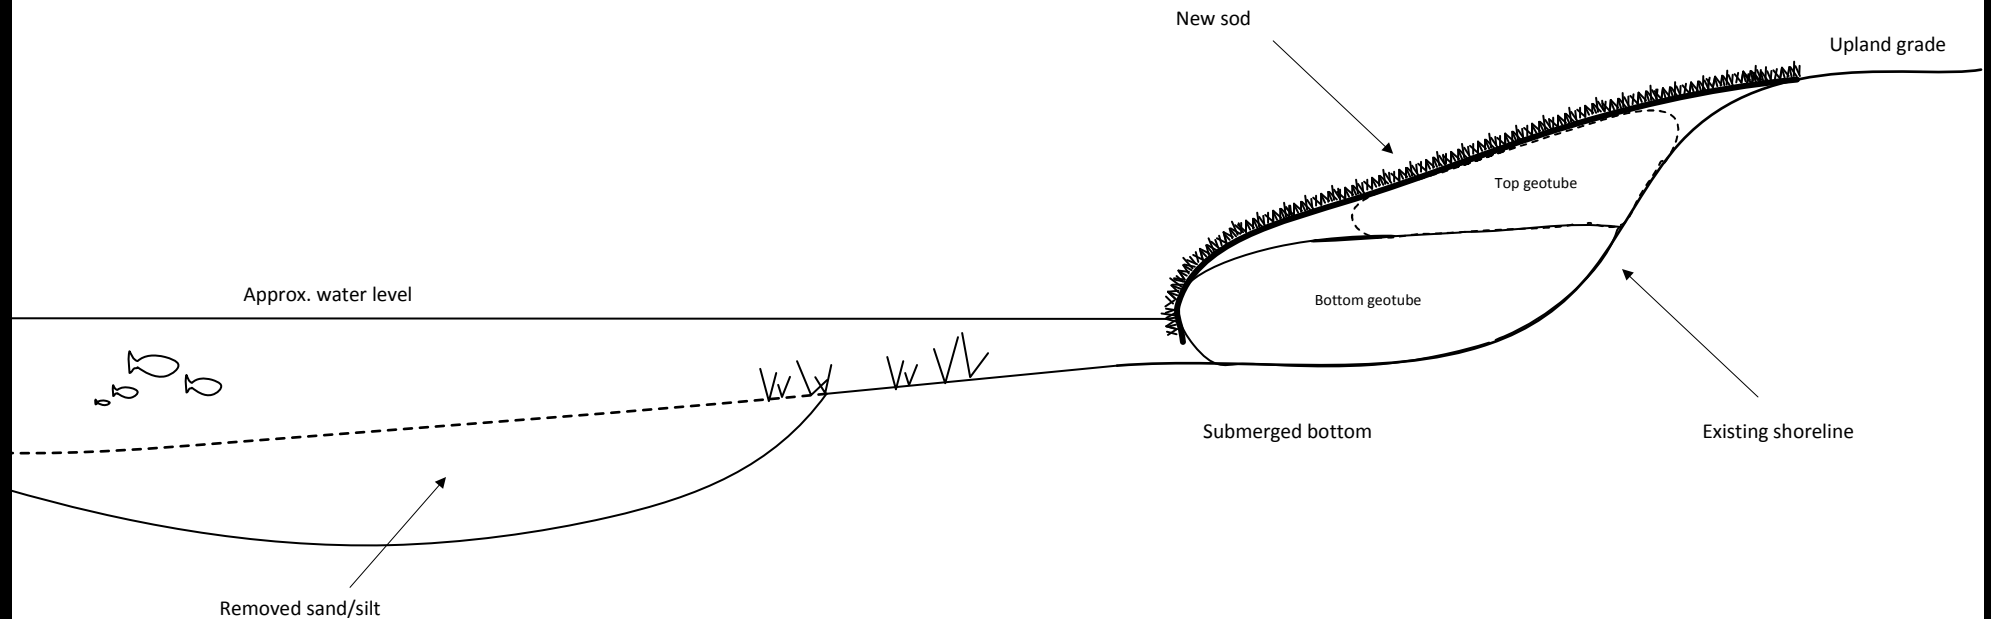

For Illustration purposes only. Actual dimensions and layout may vary and will be determined by the contract and site conditions.